

| | | |
|--|--|---|
|  <p>ITEM:103361 HOOK GEAR FITS SINGER MODEL 513, 506, 522, 538 534</p> |  <p>ITEM:130883001 LOWER GEAR FITS BABY LOCK BL702, BL713, BL722</p> |  <p>ITEM:155819 VERTICAL SHAFT TOP GEAR FITS SINGER 413, 416 418, 477</p> |
|  <p>ITEM:163326 UPPER HORIZONTAL SHAFT GEAR FITS SINGER 401, 403, 500, 503, 630, 635, 646</p> |  <p>ITEM:163328 VERTICAL SHAFT TOP GEAR FITS SINGER 403, 411, 500, 629, 630, 645</p> |  <p>ITEM:163329 HOOK SHAFT GEAR FITS SINGER 401, 403, 500, 600, 636, 639, 645, 700</p> |
|  <p>ITEM:163996 LOWER HORIZONTAL SHAFT GEAR UNDER VERTICAL SHAFT FIT SINGER 620, 500, 403</p> |  <p>ITEM:163997 LOWER HORIZONTAL SHAFT GEAR UNDER HOOK FITS SINGER 401, 403, 500, 600, 750, 900</p> |  <p>ITEM:174204 BOTTOM VERTICAL SHAFT GEAR FITS SINGER 401, 403, 431, 500, 609, 629, 646</p> |

| | | |
|---|---|--|
|  <p>ITEM:174488 FEED SHAFT GEAR FIT SINGER 417, 502, 507, 518 533, 534</p> |  <p>ITEM:353207 ANGLED FEAR FITS SINGER 1411</p> |  <p>ITEM:382980 ANGLED GEAR SET FITS SINGER 935, 1200, 2000, 2001</p> |
|  <p>ITEM:383273 FEED SHAFT GEAR FITS SINGER 560, 714, 717, 719 834, 844, 900, 925</p> |  <p>ITEM:640013008 OSCILLATING SHAFT HOOK GEAR FITS NEW HOME 624, 641</p> |  <p>ITEM:640041005 HOOK DRIVER SHAFT BEVEL GEAR FITS NECCHI 520 NEW HOME</p> |
|  <p>ITEM:601079001 GEAR FITS NEW HOME 672, 680</p> | | |